



Open-Edge™ Adjustable Book Jacket Cover Instructions

step
1

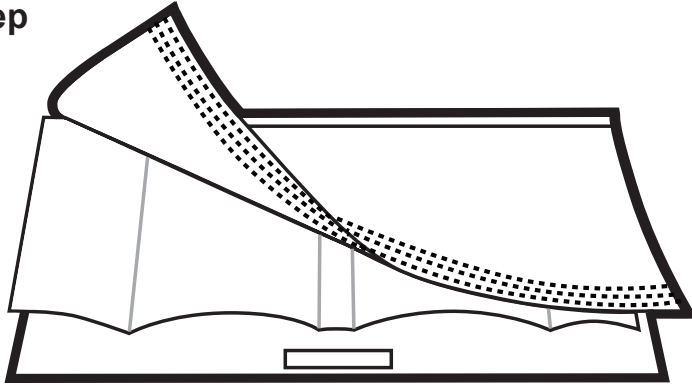

Insert the jacket printed side down between the paper and film. Fold transparent film over onto paper backing and tape to hold in position. Crease film with a plastic folder. Book is now ready to be put into book jacket.

step
2

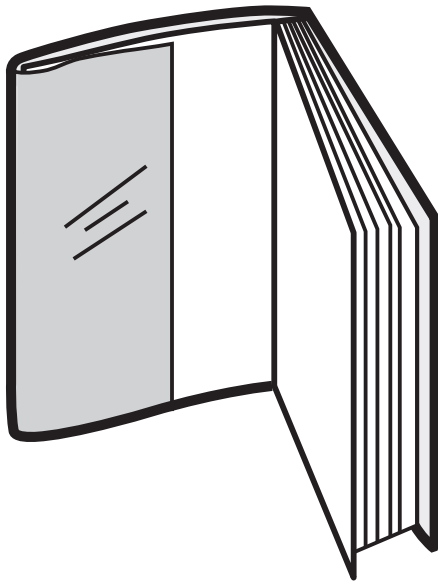

Wrap jacket around book. Lift jacket away from book and apply tape to hard outside cover of book. Wrap the tape over the edge of book and apply to the book jacket cover.