



Multiple Tape and Label Dispenser Instructions

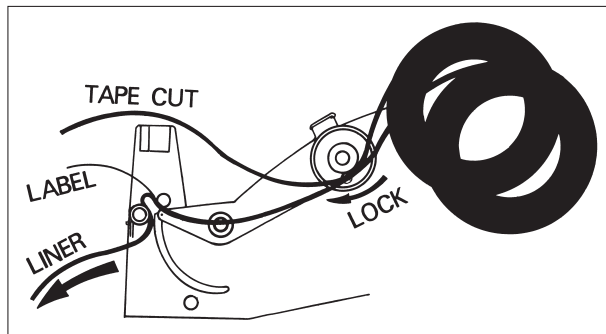

1. Rotate forward both plastic knobs on side of load and lock bar to unlock.
2. Pull plastic knobs until they are in full forward position.
3. Set rolls for tape and/or labels on base rollers so adhesive side faces down.
4. **Tape:** Pull end of roll about 5" forward.
Labels: Pull end of roll about 10" forward over bottom metal bars.
5. Install roll separators between rolls.
6. Push back the plastic knobs on load and lock bar into their original position and lock.
7. **Tape:** Pull end to the cutting bridge.
Labels: Pull end forward slowly to dispense label from liner.

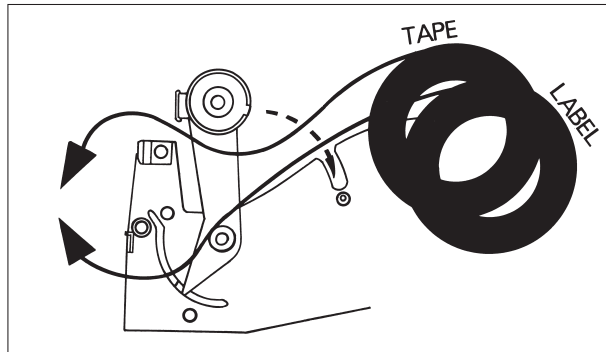