


**Improved  
Design!**

## Book Jacket and Laminate Roll Dispenser Instructions



1. Apply an oval-shaped bead of glue (Elmer's or other white glue) to the bottom of one doweled bracket.

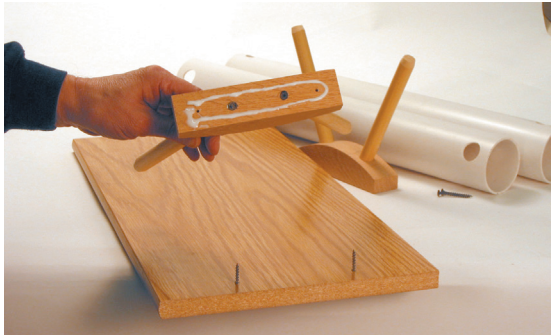

2. Insert screws through holes in bottom of base plate (with screw heads in countersinks). Line up holes in bottom of doweled bracket with screws and tighten screws securely into doweled bracket with Phillips head screwdriver as shown in photo.

**NOTE:** The bottom side of the base plate has countersunk screw holes.



3. Repeat steps (1) and (2) for mounting other doweled bracket onto opposite end of base plate.
4. Remove the four furnished self-adhesive foot pads from their liners and apply to each corner on the bottom of the base plate (not shown).



5. Place white plastic tube mandrels over support dowels and roll dispenser is ready for use.